



#### Yellowheart/Palm Molding Steps:

- 1** Plane dressed yellowheart stock to  $\frac{3}{8}$ " thick.
- 2** Round over the edges.
- 3** Rip one rounded piece to  $1\frac{1}{4}$ " wide, another to 1" wide.
- 4** Plane dressed palm stock to  $\frac{3}{4}$ " and rip a piece 1" wide.
- 5** Glue and clamp the palm to the yellowheart pieces, ensuring they are flush along the bottom.
- 6** Remove squeeze-out with a clean, moistened rag. Let dry.
- 7** Rabbet the assembly. Sand.

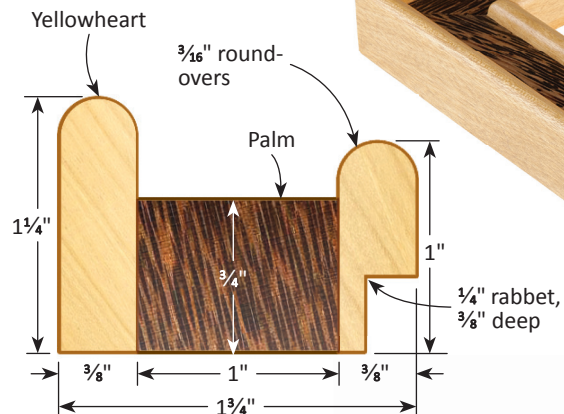

#### Wenge/Mahogany Molding Steps:

- 1** Plane dressed wenge stock to  $\frac{3}{8}$ " thick.
- 2** From it, rip two 1"-wide pieces.
- 3** Plane dressed mahogany stock to  $\frac{3}{4}$ " thick and rip a 1"-wide piece.
- 4** Glue and clamp the wenge pieces to the mahogany, ensuring they are flush along the bottom.
- 5** Remove squeeze-out with a clean, moistened rag. Let dry.
- 6** Rabbet the assembly. Sand.

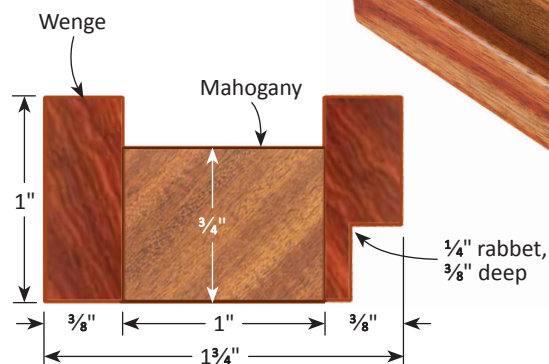

#### Walnut/Zebrawood Molding Steps:

- 1** Plane dressed walnut stock to  $\frac{1}{2}$ " thick.
- 2** Bevel each edge on one face.
- 3** From the stock, rip one  $1\frac{1}{8}$ "-wide beveled walnut piece and one  $\frac{3}{4}$ "-wide beveled walnut piece.
- 4** Plane dressed zebrawood stock to  $\frac{3}{4}$ " thick; rip a  $\frac{3}{4}$ "-wide piece.
- 5** Glue and clamp the walnut pieces to the zebrawood, ensuring they are flush along the bottom.
- 6** Remove squeeze-out with a clean, moistened rag. Let dry.
- 7** Rabbet the assembly. Sand.

