


Online Extra

## Tough-Enough Front End Loader

June/July 2013, Issue 53, Page 34

1 square = 1"

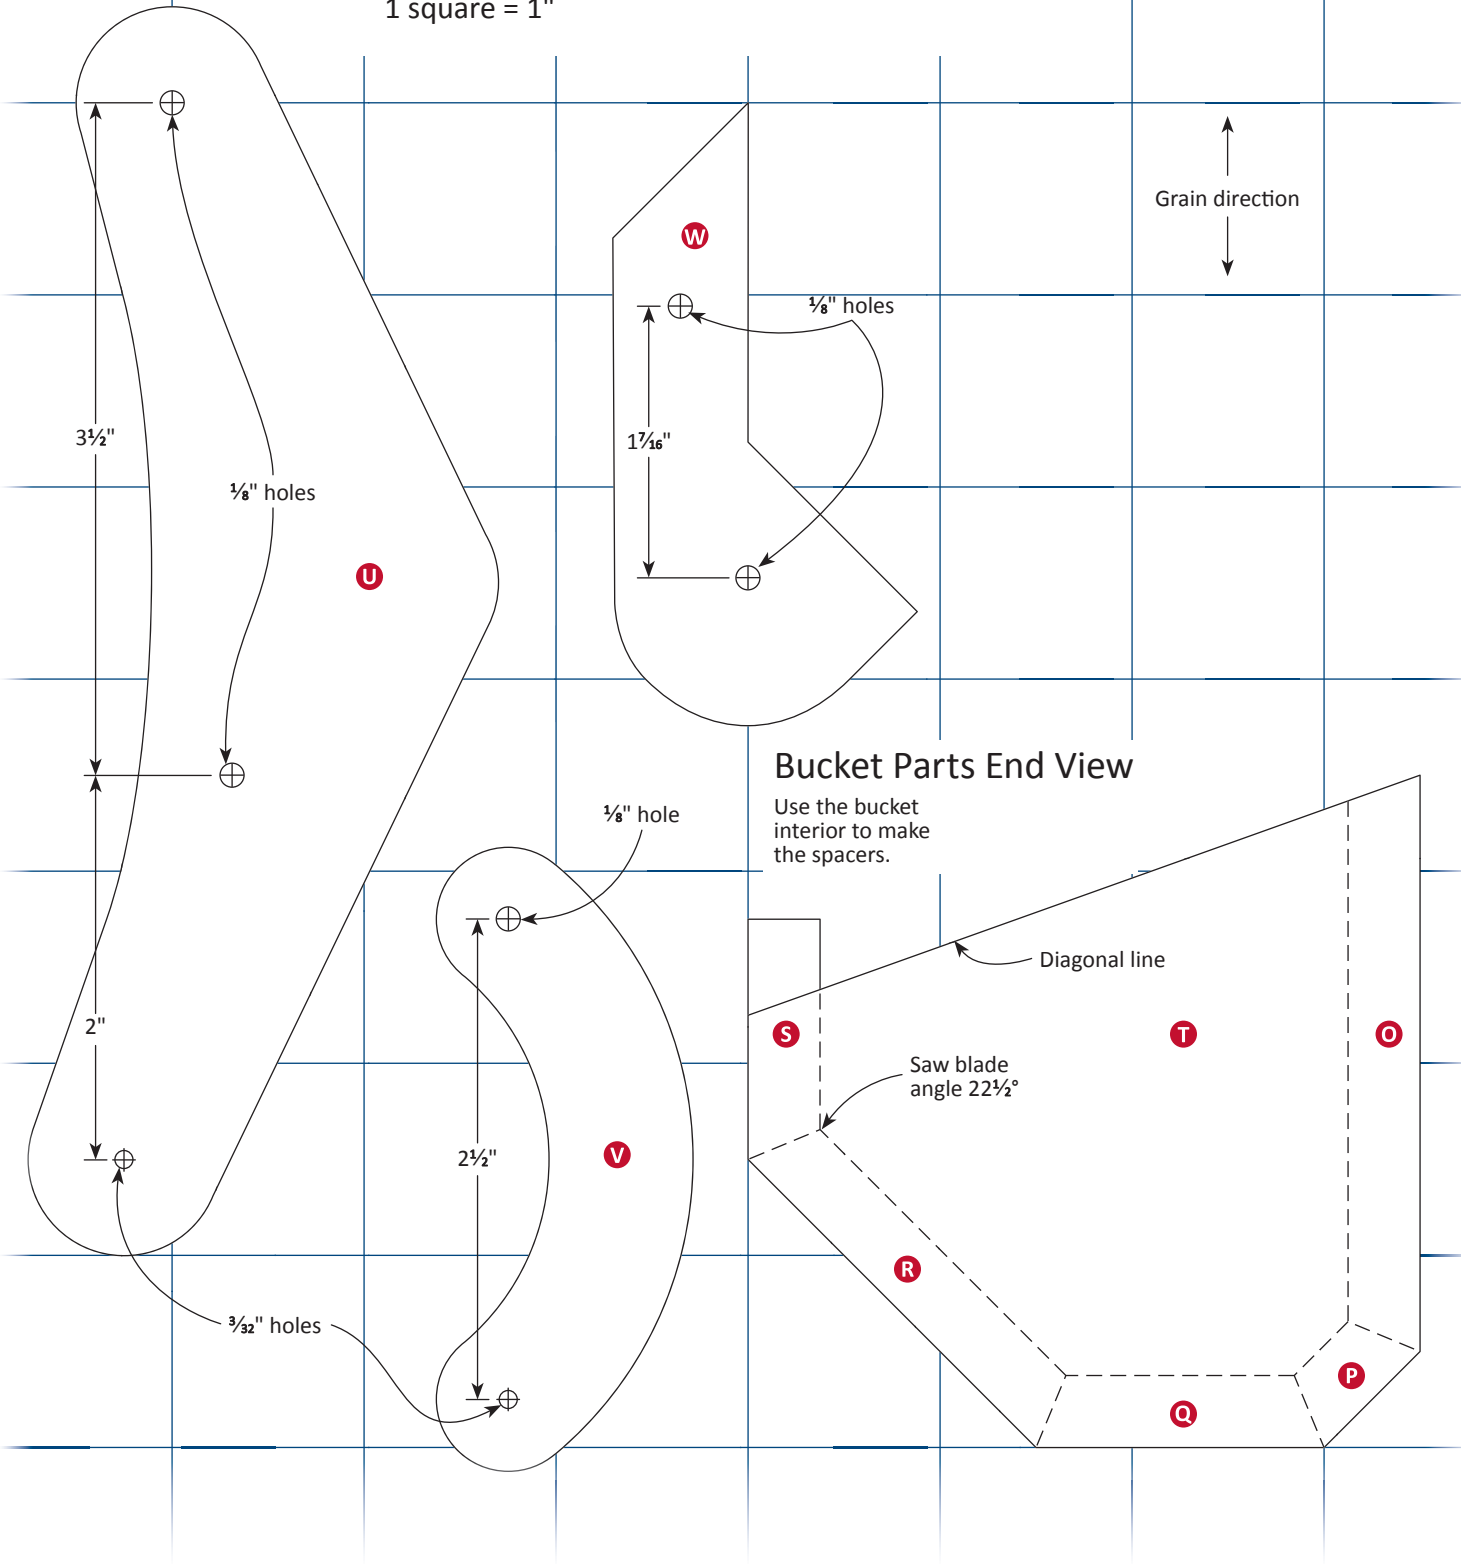

Grain direction

### Bucket Parts End View

Use the bucket interior to make the spacers.

Diagonal line

Saw blade angle 22 1/2°

# Kerfing Template 100% size

